

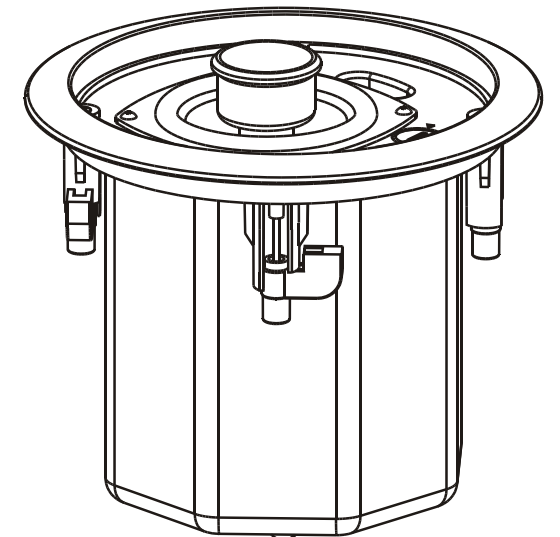


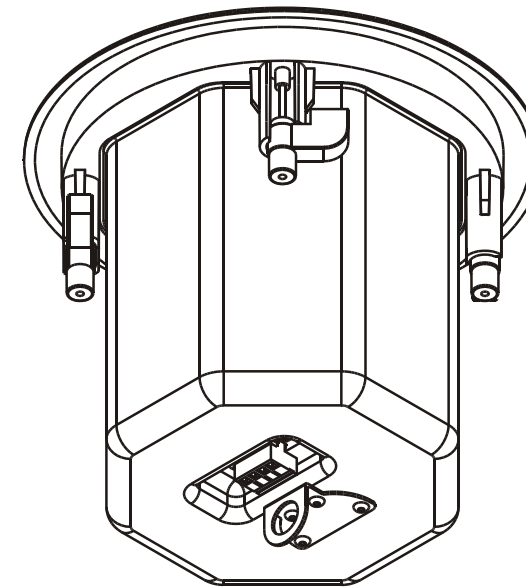

Ceiling Loudspeaker Instruction Manual

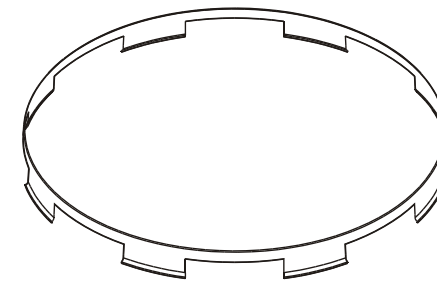

English

Table of contents

1. Points for Attention.....1

2. Introduction.....2

3. Features Description.....3

4. Prepared for Installation.....4

5. Installation Steps.....5-7

6. Technical Specifications.....8

6. Technical Specifications

Model	L4-40 WOOFER
Built-in Speaker	one 4"(105mm)woofer speaker
	one piece 3/4"(19mm)tweeter speaker
Input Power	rated 20W max 30W
Output Power	3.7W/7.5W/15W/30W
Input Impedance	1.327KΩ /656Ω /328Ω /164Ω
Input Voltage	70/100V
Frequency Response	100-20,000HZ
Output Sound Pressure & Voltage	86dB(1M/W)

1. Points for attention

- 1.1 Please read through this instruction manual before operating the L4-40 Woofer ceiling loudspeakers, so you will know how to set and operate your model properly. After you have finished reading the instruction manual, put it away in a safe place for future reference.
Caution: the fault setting will permanently damage your apparatus.
- 1.2 Don't operate your ceiling loudspeaker over the setting specification, or it will affect the apparatus's life span and performance.
- 1.3 Don't use solvents or ethanol to clean your ceiling loudspeaker.
- 1.4 Don't open the unit for repaired by yourself. No user serviceable parts inside.
Please refer servicing to qualified service personnel.


Thank you very much for expressing your confidence in our products by purchasing ceiling loudspeakers. In order to get the best out of your ceiling loudspeaker, please go through this instruction carefully.

2. Introduction


L4-40 Woofer make use of the innovative design and high quality materials to supply the ceiling loudspeaker with compact appearance and excellent performance. L4-40 Woofer is a compact indoor ceiling loudspeaker, which contains a coaxial 4" woofer and 3/4" titanium-coated tweeter. It provides the high fidelity full-range sound over an extremely wide coverage area, you can randomly select the output power 70V or 100V by the tap selector on the panel according to your requirement.

Appendix: the following figures describe the possible series/parallel connecting modes.


Series mode:

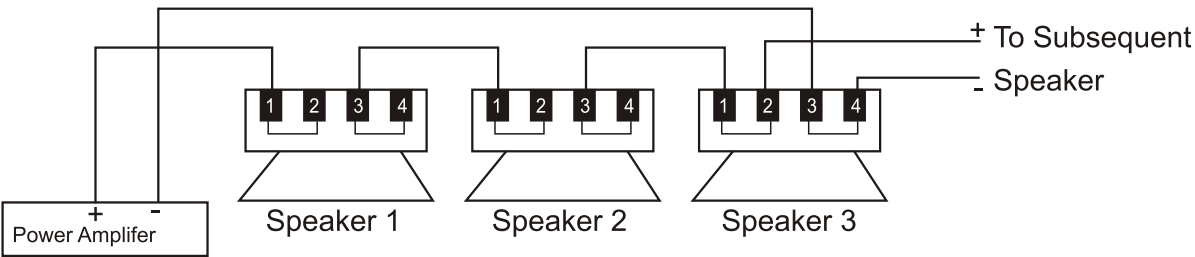


Parallel mode:

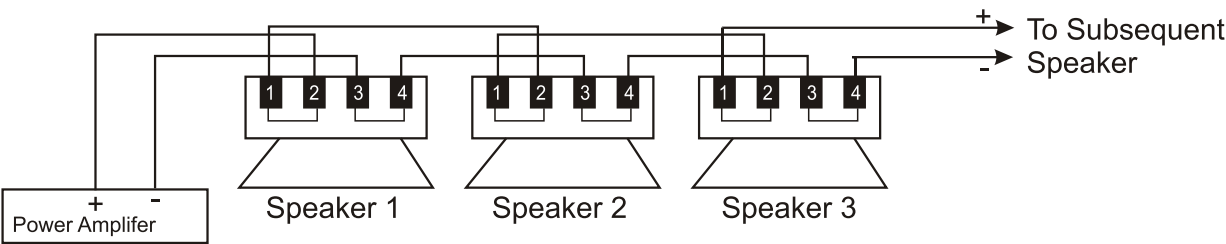


5.4 After the step 3, rotating the mounting tabs to lock the unit at the specified place.
The further details are as follows;

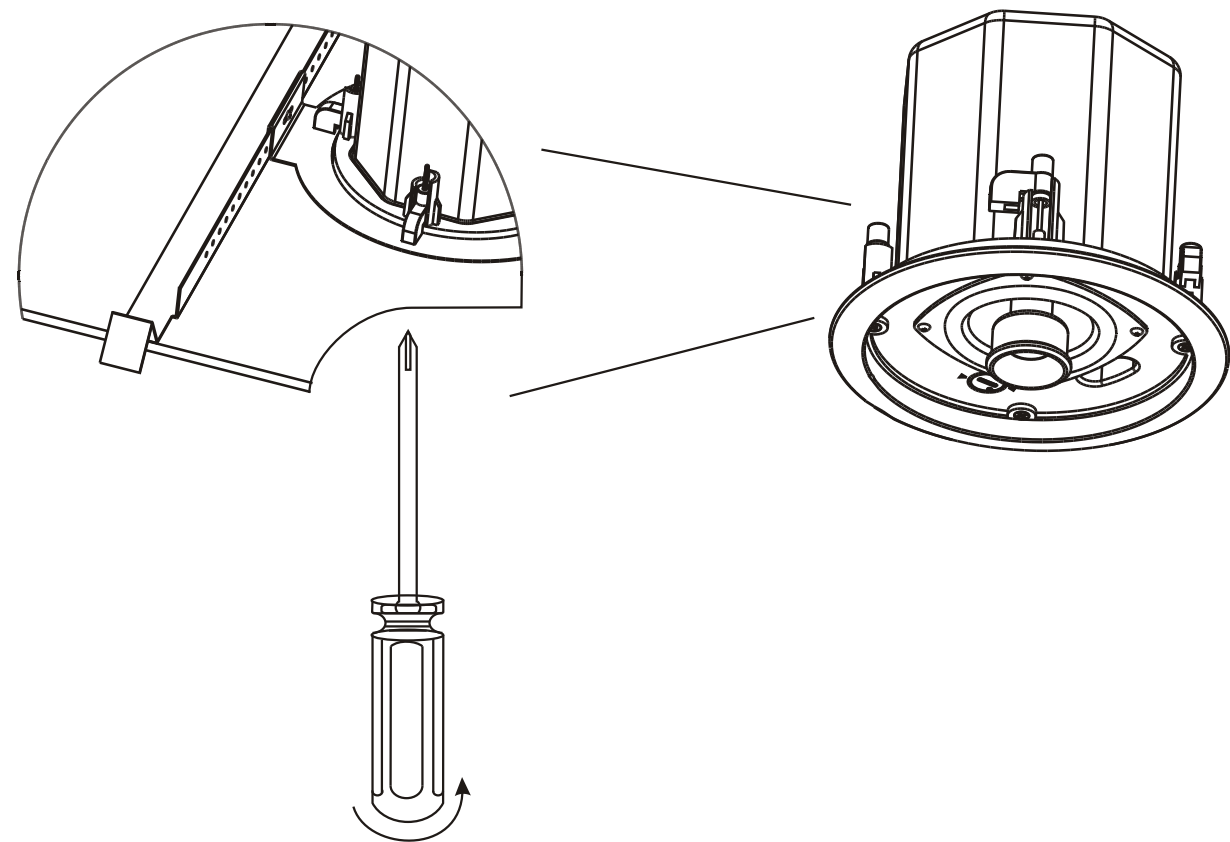

5.5 Then, you should select the required output power via the tap selector on panel.
Finally, install the perforated press-in grille for ending the installation.

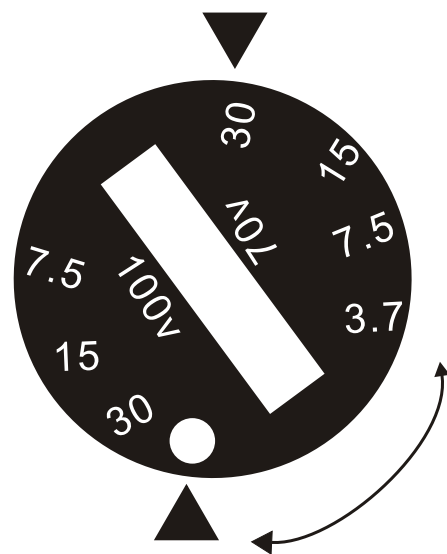

3. Features Description

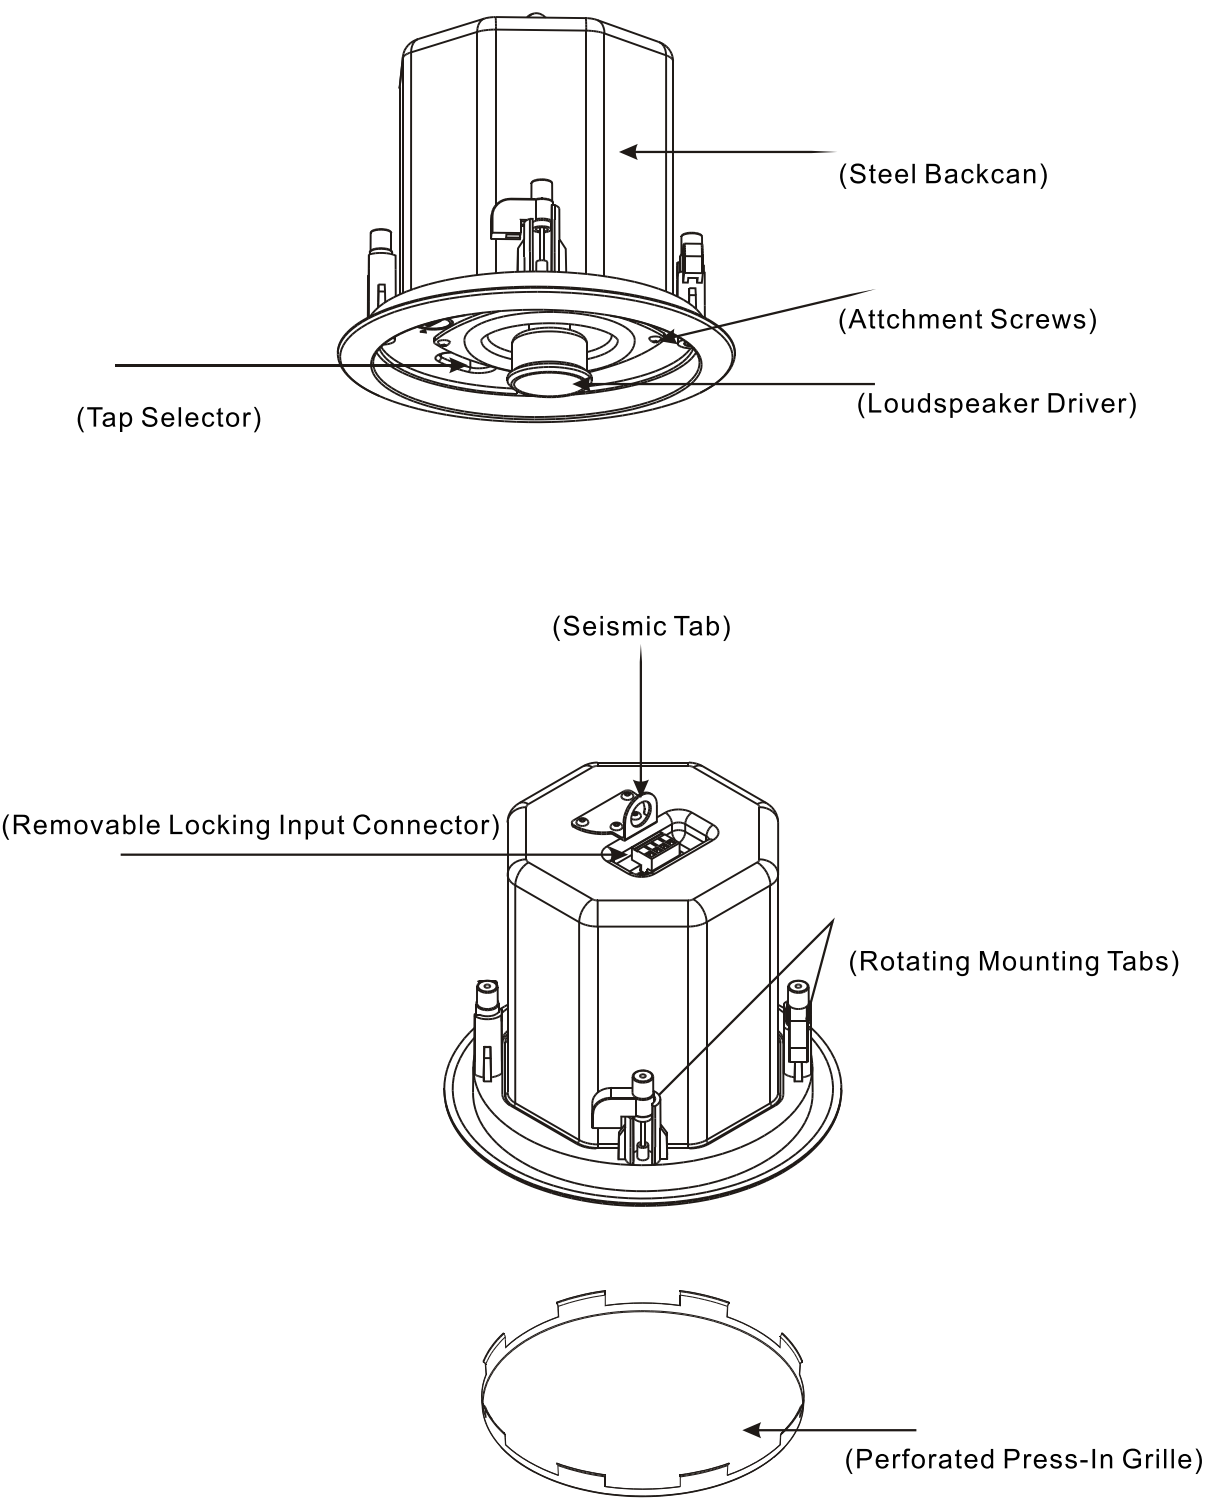


4. Prepared for Installation

It is easy to install your L4-40 Woofer product at a proper place of ceiling in safety way. If necessary, you can make use of the attached "C" bracket and slid track to match up your installation, then rotating the mounting tabs to lock.


Installation accessories: "C" bracket, slid track.

5. Installation Steps

5.1 First, drill a round hole into the ceiling in accordance with the dimension of "C" bracket, then use the slid track to mount the "C" bracket on ceiling. The further details are as follows:

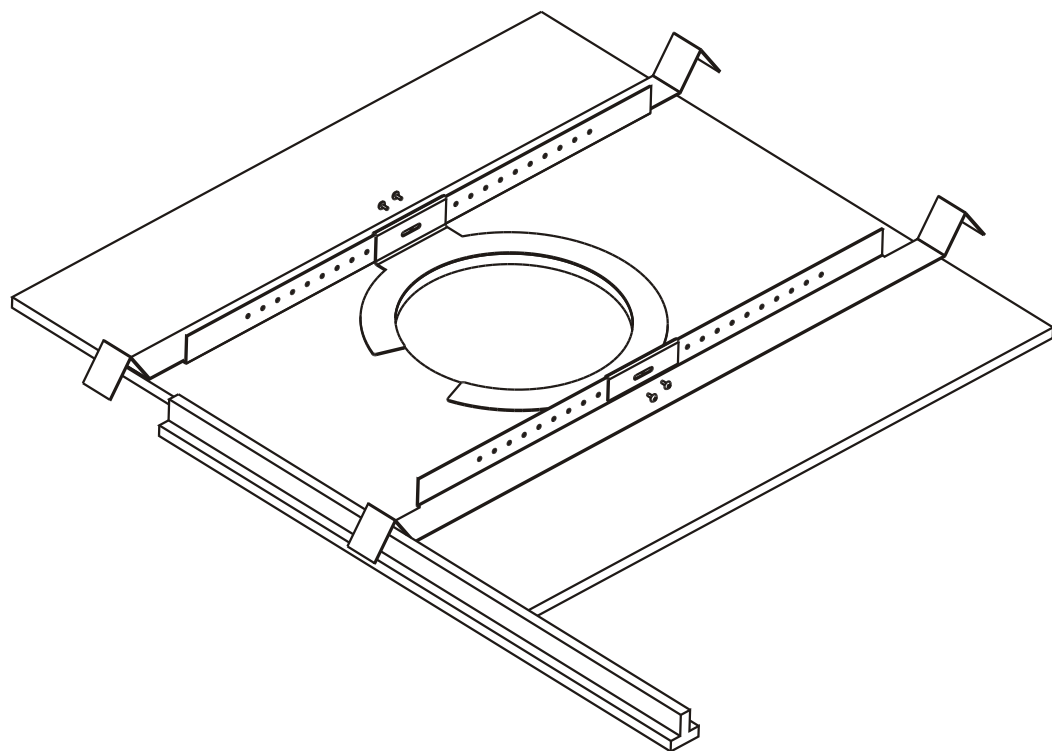

5.2 Please remove the removable locking input connector, and then finish the wiring work before installing your unit. The further details are as follows:

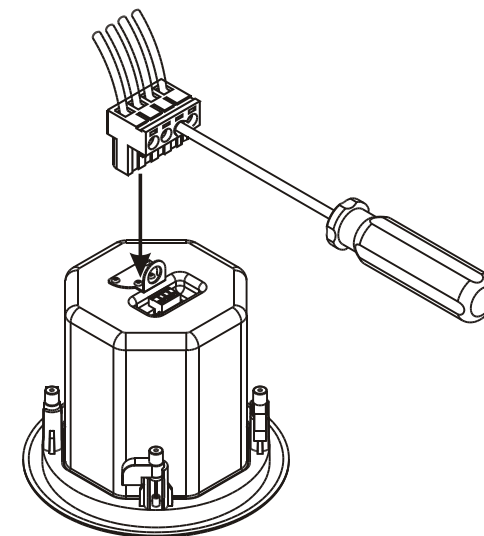

5.3 After the step1 and 2, put the unit into the ceiling round hole after inserting the input connector into the connecting socket. The further details are as follows:

